

# taurus



ENGLISH / AFRIKAANS

## Aspiradora Liquidos

complies with  
INTERNATIONAL  
IEC60335  
SAFETY SPECIFICATIONS

**t**  
1800W

2 YEAR  
WARRANTY

 
 
 
 
 
 
 
 
Model:  
948160

PLEASE READ ALL INSTRUCTIONS BEFORE USE

# ENGLISH MANUAL

## Dear customer,

Thank you for choosing to purchase a Taurus brand product. Thanks to its technology, design and operation and the fact that it exceeds the strictest quality standards, a fully satisfactory use and long product life can be assured.

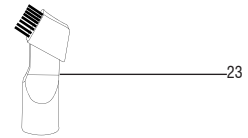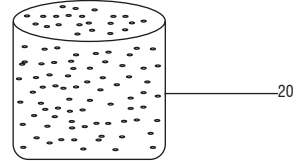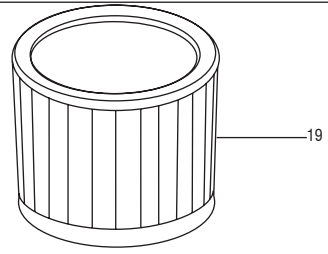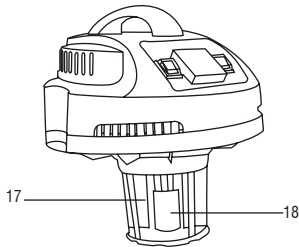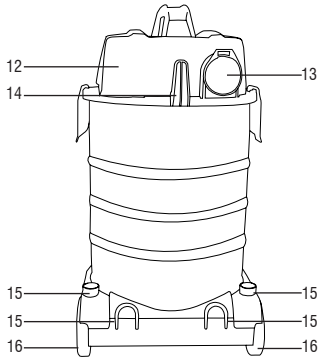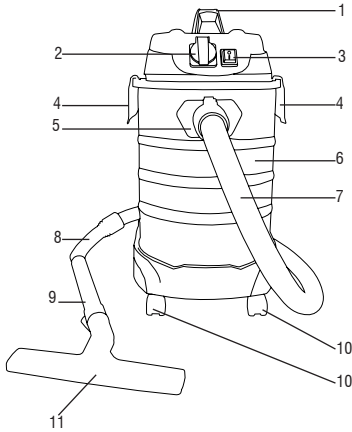

## 1. Parts description

1. Handle
2. External Power outlet
3. Power switch
4. Tank locking clamp
5. Hose Inlet
6. 30L drum
7. Flexible hose
8. Suction regulator
9. Stainless steel telescopic pipe
10. Front wheels
11. Floor tool
12. Cover
13. Blower exhaust outlet
14. Cord storage hook (top)
15. Onboard accessory storage
16. Back wheels
17. Filter basket
18. Float switch
19. Microparticle filter

- 20. Foam filter
- 21. Dual mode floor tool
- 22. Wet and dry floor tool
- 23. 2 in 1 crevice tool/brush

## **2. Safety advice and warnings!**

Read these instructions carefully before switching on the appliance and keep them for future reference. Failure to follow and observe these instructions could lead to an accident. Clean all the parts of the product as indicated in the cleaning section, before use.

### **2.1. Use or working environment:**

2.1.1. This appliance is designed solely for domestic use and for the designated purpose.

2.1.2. Do not use the appliance outdoors (unless it has been specifically designed for outdoor use)

2.1.3. Use the appliance in a well ventilated area.

2.1.4. Do not subject the appliance to heat, direct sunshine or very high moisture (e.g. Rain)

2.1.5. Never immerse the appliance in liquids and be aware of sharp edges that may damage it.

2.1.6. Never use the appliance with wet or damp hands. Unplug it immediately if it becomes wet or damp when it is running.

2.1.7. The appliance is designed to vacuum up materials that are not hazardous to your health and that are not flammable.

2.1.8. Never hold the connectors in front of your face (especially your eyes, ears, etc) Never direct the nozzle towards persons or animals.

2.1.9. Keep children and bystanders away when using this appliance.

2.1.10. Do not vacuum up ash, hot coals, large fragments of glass and sharp objects.

2.1.11. Do not vacuum up any toner dust, which is used in printers and copies for example, because it is electrically conductive. In addition, it is possible that it will not be completely filtered out by the filter system of the wet and dry vacuum cleaner and can be released in the air via the exhaust fan.

2.1.12. Do not place flammable material near the appliance.

2.1.13. Do not use the appliance in association with a programmer, timer or other device that automatically switches it on.

2.1.14. Do not use the appliance if the cable or plug is damaged.

2.1.15. Ensure that the voltage indicated on the rating label matches the mains power supply voltage before plugging in the appliance.

2.1.16. Connect the appliance to the mains power supply with an earth socket withstanding a minimum of 16 amperes.

2.1.17. The appliance's plug must fit into the mains power supply socket properly. Do not alter the plug.

2.1.18. If using a multi plug check ratings carefully as the current used by several appliances could easily exceed the rating of the multi plug.

2.1.19. If any of the appliance casings breaks, immediately disconnect the appliance from the mains power supply to prevent the possibility of an electric shock.

2.1.20. Do not use the appliance if it has fallen on the floor or if there are visible signs of damage.

2.1.21. Do not force the power cord. Never use the power cord to lift up, carry or unplug the appliance.

2.1.22. Do not wrap the power cord around the appliance.

2.1.23. Do not clip or crease the power cord.

2.1.24. Do not allow the power cord to hang or to come into contact with the hot surfaces of the appliance.

2.1.25. Check the state of the power cord. Damaged or tangled cables increase the risk of electric shock.

2.1.26. The appliance is not suitable for outdoor use.

2.1.27. Power cord should be regularly examined for signs of damage, and if the cord is damaged, the appliance must not be used.

2.1.28. Do not touch the plug with wet hands.

### **2.2. Personal safety:**

2.2.1. CAUTION: Do not leave the appliance unattended during use as there is a risk of an accident.

2.2.2. Do not touch the heated parts of the appliance, as it may cause serious burns.

2.2.3. This appliance is only for domestic use, not for industrial or professional use. It is not intended to be used by guests in hospitality environments such as bed and breakfast, hotels, motels, and other types of residential environments, even in farm houses, areas of the kitchen staff in shops, offices and other work environments.

2.2.4. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance

by a person responsible for their safety.

2.2.5. This appliance is not a toy. Children should be supervised to ensure that they do not play with the appliance.

### **2.3. Use and care:**

2.3. Use and care:

2.3.1. Fully unroll the appliance's power cable before each use.

2.3.2. Do not use the appliance if the parts or accessories are not properly fitted.

2.3.3. Do not use the appliance when full.

2.3.4. Do not turn the appliance over while it is in use or connected to the mains power supply.

2.3.5. Do not block the inlet or outlet ports.

2.3.6. Unplug the appliance from the mains power supply when not in use and before undertaking any cleaning task.

2.3.7. This appliance should be stored out of reach of children.

2.3.8. Do not store the appliance if it is still hot.

2.3.9. Never leave the appliance unattended when in use and keep out of the reach of children.

2.3.10. Do not vacuum any sharp-edged, hot or incandescent material

2.3.11. The appliance should not be exposed to heat.

2.3.12. Unplug the appliance from the mains supply socket after use and before every cleaning. Pull the plug, not the mains cable, in order to disconnect the appliance from the mains.

2.3.13. Ensure that blockages are removed.

2.3.14. Do not use the vacuum cleaner without dust container or dust filter in place.

2.3.15. Do not vacuum any flour, cement etc, in order to avoid the overloads.

2.3.16. If, for some reason, the appliance were to catch fire, disconnect the appliance from the mains power supply and **DO NOT USE WATER TO PUT THE FIRE OUT.**

### **2.4. Service:**

2.4.1. Make sure that the appliance is serviced only by suitably qualified technician, and that only original spare parts or accessories are used to replace existing parts/accessories.

2.4.2. If the power cord is damaged, the manufacturer or its service agent or a similarly qualified person must replace it in order to avoid a hazard.

2.4.3. Any misuse or failure to follow the instructions for use renders the guarantee and the manufacturer's liability null and void.

## **3. Instructions for use**

### **3.1. Before use:**

3.1.1. Remove the appliance's protective film(if applicable).

3.1.2. Before you start the appliance, make sure that the dust filter is in place before dry vacuuming.

3.1.3. Before you start the appliance, make sure that the hose assembly is in the position.

3.1.4. Unwind the power cord.

### **3.2. Use and care:**

#### **3.2.1. Vacuuming dry materials:**

This vacuum comes with both a non woven dust bag and a microparticle filter. Either can be used when vacuuming dry materials.

3.2.1.1. Ensure the foam filter is clean and dry and installed over the the filter basket.

3.2.1.2. Install the non woven dust back. Make sure it is securely placed inside the drum.

3.2.1.3. Secure the upper part of the vacuum back onto the tank.

3.2.1.4. Attach the flexible hose to the suction inlet .

3.2.1.5. Attach your choice of floor tool or telescopic tube to the end of the hose.

3.2.1.6. Turn on the vacuum and start vacuuming.

3.2.1.7. When you have finished vacuuming, turn the vacuum off and remove the plug from the mains socket.

#### **3.2.2. Vacuuming up water and liquids:**

3.2.2.1. Ensure that the tank is free of dust and dirt.

3.2.2.2. Remove the dust bag and only leave the foam filter over the filter basket.

3.2.2.3. Secure the upper part of the vacuum back onto the tank.

3.2.1.4. Attach the flexible hose to the suction inlet .

3.2.1.5. Attach your choice of floor tool or telescopic tube to the end of the hose.

3.2.1.6. Turn on the vacuum and start vacuuming.

3.2.1.7. When you have finished vacuuming, turn the vacuum off and remove the plug from the mains

socket.

TIPS:

- If you want to vacuum up a large quantity of liquid from a sink or tank, please don't put the entire suction nozzle in the liquid; rather leave a little space so that some air can also be drawn in along with the liquid.

- The appliance is equipped with a float switch that will stop the vacuuming when the tank is full.

- Be aware that the full tank can be very heavy.

**IMPORTANT:**

- After wet vacuuming, switch off the appliance and unplug it. Empty the tank and clean/dry it inside and outside before putting it away. Do not store the appliance with water inside the tank.

- Please note the maximum water capacity is 15 Litres.

### **3.2.3. Using the microparticle filter**

3.2.3.1. When using the microparticle filter, no dust bag is needed.

3.2.3.2. Place the microfilter on the filter basket from the top, turn the filter cap to secure it in place.

3.2.3.4. After each use, clean the microparticle filter by tapping or brushing the dust out.

### **3.2.4. Operating the vacuum:**

3.2.4.1. Unwind the power cord from the cord storage and plug into the mains power socket.

3.2.3.2. Switch the vacuum cleaner ON by pressing the ON/OFF switch.

3.2.4.3. A suction regulator can be found on the hose handle. To activate simply slide the regulator open to reduce the level of suction required.

3.2.4.4. The suction power will reduce and stop as the drum fills up. It is recommended to empty the drum on a regular basis.

3.2.4.5. To switch the vacuum OFF depress the ON/OFF switch again and then remove from remove the plug from the mains power socket.

### **3.2.5. Using the blower function.**

3.2.5.1. Unwind the power cord from the cord storage.

3.2.5.2. Attach the flexible hose to the blow outlet.

3.2.5.3. Switch the vacuum cleaner ON by pressing the ON/OFF switch.

3.2.5.4. To switch the vacuum OFF depress the ON/

OFF switch again and then remove from remove the plug from the mains power socket

### **3.3 Once you have finished using the appliance:**

3.3.1. Allow appliance to cool down.

3.3.2. Unplug the appliance from the mains power supply.

3.3.3. Clean the appliance as described in the cleaning section.

### **4. Cleaning**

4.1. Disconnect the appliance from the mains power supply before undertaking any cleaning task.

4.2. Open the tank.

4.3. Take out the dust filter.

4.4. Empty the tank.

4.5. Wash off the dust filter with clean water.

4.6. Ensure the dust filter dries completely.

4.7. Clean the outer parts of the appliance with a damp cloth with a few drops of washing-up liquid and then dry. CAUTION! Do not immerse electrical parts of the appliance in any liquid.

4.8. Do not use solvents, or products with an acid or base pH such as bleach, or abrasive products, for cleaning the appliance.

4.9. Never submerge the appliance in water or any other liquid or place it under running water.

### **5. Anomalies and repair**

5.1. Take the appliance to an authorised support centre if product is damaged or other problems arise.

5.2. If the connection to the mains has been damaged, it must be replaced and you should proceed as you would in the case of damage.

## 6. Trouble shooting guide

 
 
 
 
 
 
 
 
| <b>Problem</b>                       | <b>Possible causes</b>  | <b>Solutions</b>  |
|--------------------------------------|---|---|
| Missing parts/Accessories.           | 1. The are wrapped up in the tank.  | 1. Look inside the tank to find all accessories.  |
| The vacuum cleaner does not start.   | 1. No power at the outlet.<br>2. Not plugged in correctly.<br>3. The power cord is cut.<br>4. On/Off switch is defective.<br>5. Defective motor.    | 1. Check the power.<br>2. Unplug/insert the plug into the outlet again.<br>3. Have it replaced by an authorised service center.<br>4. Have it repaird by and authorised service center.<br>5. Have it repaird by and authorised service center. |
| Dust coming out of the exhaust port. | 1. The filter is not installed or not installed correctly.<br>2. The filter is damaged.<br>3. The filter is clogged.<br>4. The filter doesn't work. | 1. Install the filter correctly.<br>2. Replace the filter.<br>3. Remove the filter and clean it.<br>4. Clean or replace the filter.   |
| Loss of suction.                     | 1. The flexible hose fitting is loose.<br>2. Filter clogged.<br>3. Tank or bag full.<br>4. Hole in the hose.<br>5. Hose or accessory clogged.       | 1. Tighten the fitting.<br>2. Clean or replace the filter.<br>3. Empty or replace them.<br>4. Replace the hose.<br>5. Check and unclog as necessary.  |
| Static shock.                        | 1. Dry environment.<br>2. Air's relative humidity too low.  | 1. Increase humidity. (Where possible, use a portable or stationary humidifier.)<br>2. This is temporary and does too low. not affect the use of the vacuum cleaner.  |
| Mist in exhaust air.                 | 1. The filter is saturated.   | 1. Clean or replace the filter.   |

# AFRIKAANS HANDLEIDING

Geagte Klient

Baie dankie vir u keuse om 'n Taurus handelsmerk produk te koop

Danksy die tegnologie, ontwerp en werking en die feit dat dit voldoen aan die strengste gehalte standaarde, is u verseker van 'n volle bevredigende gebruik en lang produklewe.

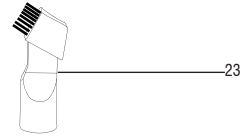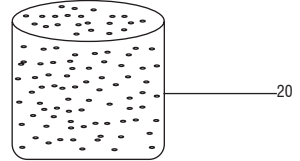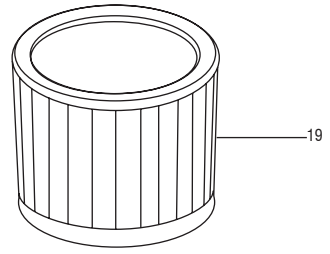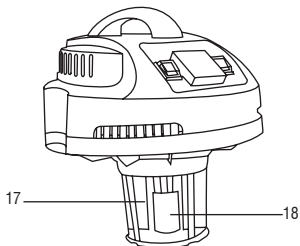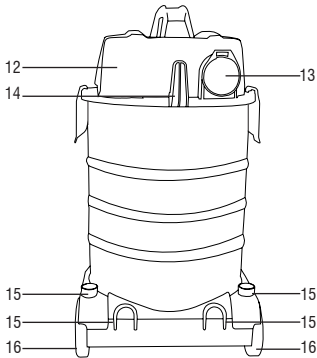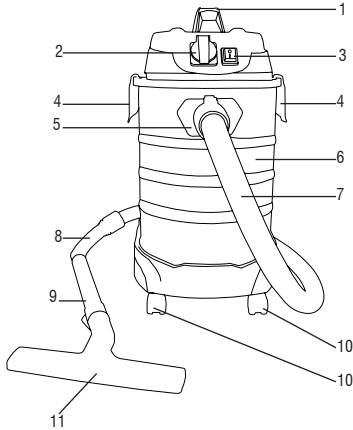

## Beskrywing

1. Handvatsel
2. Eksterne krag uitlaat
3. Krag skekelaar
4. Drom sluiting klem
5. Pyp inlaat
6. 30L Drom
7. Buigsame pyp
8. Suiging reguleerder
9. Vlekvrye staal teleskopiese pyp
10. Voor wiele
11. Vloer instrument
12. Bedekking
13. Blaser uitlaat
14. Koord stoor
15. Aanboord bykomstighede stoor
16. Agter wiele
17. Filtrasie bak
18. Dryf skakelaar

- 19. Mikropartical filter
- 20. Skuim filter
- 21. Dubbele vloer instrument
- 22. Nat en droog vloer instrument
- 23. 2 in 1 klein instrument/borsel

## 2. Belangrike veiligheidsvoorsorg

Wanneer elektriese toestelle gebruik word, moet die basiese veiligheidsmaatreels altyd gevolg word.

### 2.1. Gebruik en werksomgewing:

- 2.1.1. Die toestel is vir huishoudelike gebruik alleen en nie vir kommersiele gebruik.
- 2.1.2. Die toestel moet nie buite gebruik word nie (tensy dit vir die doel vervaardig is).
- 2.1.3. Gebruik die produk in n goed geventileerde area.
- 2.1.4. Die toestel mag nie aan hitte, direkte sonlig of nattigheid blootgestel word nie (i.e. Reen).
- 2.1.5. Maak die buitekant van die toestel met n klam lap skoon en moet glad nie in water gedruk word nie.
- 2.1.6. Moenie die prop met nat hande hanteer nie.
- 2.1.7. Die toestel is ontwerp om material wat nie gevaarlik is en vlambaar is op te suig.
- 2.1.8. Die verbindings mag nie naby die gesig kom nie. Die mondstuk mag nie na persone of diere gerig word nie.
- 2.1.9. Hou kinders en omstanders weg wanneer toestel gebruik word.
- 2.1.10. Moenie warm as, warm kole, groot stukke glas en skerp.
- 2.1.11. Moenie toner stof wat in n drukker gebruik word opsuig nie, want dit is Elektries geleidend. Dit sal nie deur die filter sisteem gaan nie en sal in die lug vrygelaat word.
- 2.1.12. Die toestel mag nie naby vlambare material geplaas word nie.
- 2.1.13. Moenie die toestel gebruik in samewerking met 'n programmeerder of n ander toestel wat outomaties aan skakel nie.
- 2.1.14. Moenie die toestel gebruik as die koord of prop beskadig is.
- 2.1.15. Maak seker die spanning soos aangedui op die gradering etiket kom ooreen met die hoofspanning.
- 2.1.16. prop in elektriese uitlaat wat 16 amperes hanteer.
- 2.1.17. die toestel prop moet in die hoof prop pas en Moenie die prop verander.

- 2.1.18. Indien n multi prop gebruik word maak seker die toestel se strome oorskry nie die gradering van die multi prop.
- 2.1.19. Moenie die toestel gebruik as die prop of koord beskadig isnie of enige sigbare skade aan die omhulsel is nie.
- 2.1.20. Moenie die toestel gebruik as dit op die vloer geval het en daar is sigbare skade.
- 2.1.21. Moenie die koord gebruik om toestel op te tel of te sleep.
- 2.1.22. Die koord mag nooit om die toestel gedraai word nie.
- 2.1.23. Moenie die koord plooi nie.
- 2.1.24. Die koord moenie oor die kant van die tafel of toonbank hang of aan warm oppervlaktes raak nie.
- 2.1.25. Maak seker die koord is nie beskadig of verstrengel nie.
- 2.1.26. Die toestel moet nie buite gebruik word nie.
- 2.1.27. Die toestel mag nie gebruik word as die koord beskadig is nie.
- 2.1.28. Moenie die prop met nat hande hanteer nie.

### 2.2. Persoonlike veiligheid:

- 2.2.1. LET WEL: Moenie die toestel sonder toesig laat nie.
- 2.2.2. Moenie warm oppervlaktes aanraak nie gebruik handvatsels of knoppe want dit kan lei tot ernstige brandwonde.
- 2.2.3. Die toestel is nie geskik vir industriële gebruik soos kantore,hotelle motelle en gastehuse.
- 2.2.4. Die toestel is nie geskik vir gebruik deur verminderd fisiese verstandelike vermoens of gebrek aan ervaring of kennis tensy hulle opleiding gehad het.
- 2.2.5. Die toestel is nie n speelding and kinders moet altyd toesig he om te verhoed dat hulle met die toestel speel.

### 2.3. Gebruik en sorg:

- 2.3.1. Die kabel moet ten volle afgewikkel word voor gebruik.
- 2.3.2. Die toestel moet nie gebruik word as die par te of bykomstighede nie behoorlik pas.
- 2.3.3. Die toestel moet nooit leeg gebruik word nie.
- 2.3.4. Die Toestel moet nooit gedraai word terwyl dit in werking is of in die muurprop gekoppel is.
- 2.3.5. Die kook oppervlakte moet nooit toegemaak word me foelie of soor tgelyke materiaal.



2.3.6. Ontkoppel die toestel van die hooftoevoer as dit nie in gebruik is nie en laat dit heeltemal afkoel voordat dit skoongemaak word. As dele afgehaal word of toegevoeg word, moet die toestel nie in werking wees nie.

2.3.7. Die toestel moet buite bereik van kinders gestoor word.

2.3.8. Die toestel moet heeltemal afkoel voor dit gestoor word.

2.3.9. Die toestel moet altyd onder toesig wees wanneer in gebruik en moet buite bereik van kinders gehou word.

2.3.10. As die toestel aan die brand slaan ontkoppel van die muursok en gooi n kombuis vadoek oor **MOET NOOIT WATER GEBRUIK!!!**

## 2.4. Diens:

2.4.1. Die toestel moet deur 'n gekwalifiseerde tegnikus gediens word

2.4.2 As die koord beskadig word moet dit deur die diensagent of 'n gekwalifiseerde persoon vervang word om brandgevaar te verhoed

2.4.3. Enige misbruik en mislukking om instruksies te volg lewer die waarborg nul en leemte

## 3. Instruksies vir gebruik

### 3.1. Voor gebruik:

3.1.1. Verwyder verpakkings material waar nodig.

3.1.2. Voor die toestel aangeskakel word maak seker die stof filter is in posisie vir droe suig.

3.1.3. Maak seker die pyp is in posisie.

3.1.4. Ontwikkel die koord heeltemal.

### 3.2. Hoe om die stofsuiër te gebruik:

#### 3.2.1. Stofsuig droe material:

Die toestel het a nie geweefde stof sak en 'n mikropartical filter. Enige een van di twee kan gebruik word vir die funksie.

3.2.1.1. Maak seker die skuim filter is skoon en droog and oor die filter sak ge installer.

3.2.1.2. Installeer die nie geweefde stof sak en maak seker dit is stewig in drom.

3.2.1.3. Verseker die boonste part van die stofsuiër bo op die drom.

3.2.1.4. Heg die buigbare pyp aan die suig inlaat.

3.2.1.5. Heg jou keuse van vloer bykomstighede of

teleskopiese pyp aan die pyp.

3.2.1.6. Skakel toestel aan en begin suig.

3.2.1.7. Na gebruik skakel toestel af en ontkoppel van muurprop.

### 3.2.2. Stofsuigh water en vloeistof:

3.2.2.1. Maak seker die drom is vry van stof en vullis.

3.2.2.2. Verwyder die stof sak en los die skuim filter oor die filter bak.

3.2.2.3. Verseker die boonste part van die stofsuiër terug op die drom.

3.2.1.4. Heg die buigsame pyp aan die toestel.

3.2.1.5. Heg jou keuse van vloer instrument of teleskopiese pyp.

3.2.1.6. Skakel aan en begin stofsuig.

3.2.1.7. Na gebruik ontkoppel van muurprop

**WENKE:**  
As 'n groot hoeveelheid vloeistof op gesuig word Moenie die punt heeltemal in die vloeistof druk nie maar 'n paart oop om ook lug saam met die vloeistof op te suig.

- Die toestel het 'n Dryf skakelaar wat die stofsuiër sal stop as die drom vol is.

- Neem kennis 'n vol drom is swaar in gewig.

**IBELANGRIK:**

• Na nat stofsuig skakel die toestel af en ontkoppel van muurprop. Maak die drom leeg, maak skoon en droog aan die binne en buitekant voor dit gestoor word. Die toestel mag nie met water in gestoor word nie.

• Let asseblief op die maksimum waterkapasiteit is 15 liter.

### 3.2.3. Gebruik van mikropartical filter:

3.2.3.1. Geen stof sak is nodig as die mikroparticle filter gebruik word nie.

3.2.3.2. Plaas die filter op die filter bak van bo af en draai filter in plek.

3.2.3.4. Na elke gebruik maak die filter skoon deur liggies te kap of om stof uit te borsel.

### 3.2.4. Gebruik van stofsuiër:

3.2.4.1. Ontwikkel die koord ten volle van die koord stoor en Koppel aan muurprop

3.2.3.2. Skakel aan deur die AAN/AF knoppie te druk.

3.2.4.3 'n suig regulator kan op die handvatset van

pyp gevind word

3.2.4.4. Die suig krag sal verminder en stop as die drom vol is. Maak die drom gereeld leeg.

3.2.4.5. Om af te skakel druk AAN/AF skakelaar en ontkoppel van muurprop.

### **3.2.5. Gebruik van blaasfunksie:**

3.2.5.1. Ontwikkel die koord van koord stoor.

3.2.5.2. Heg buigbare pyp aan die blaas uitlaat.

3.2.5.3. Skakel aan deur die AAN/AF knoppie te druk.

3.2.5.4. Om af te skakel druk AAN/AF skakelaar en ontkoppel van muurprop.

### **3.3 Na gebruik:**

3.3.1. Laat toestel afkoel.

3.3.2. Ontkoppel van die hoof muurprop.

3.3.3. Maak skoon soos in skoonmaak seksie.

### **4.Sorg en skoonmaak**

4.1. Ontkoppel van muurprop en laat toe om heeltemal aftekoel.

4.2. Maak die stof houer oop

4.3. Verwyder stof filter

4.4. Maak stof houer leeg van alle stof

4.5. Was stof filter deeglik met skoon water

4.6. Laat die stof filter deeglik droog word

4.7. Sit alle par te terug op die toestel

4.8. Maak die buitekant van die toestel met n klam lap skoon en moet glad nie in water gedruk word nie.

4.9. Moenie oplosmiddels, suur, bleikmiddels of skuur produkte gebruik om toestel skoon te maak nie.

4.10. Moet nooit toestel onder lopende water was nie.

### **5. Anomalies and herstel**

5.1. Neem die toestel na gemagtigde tegniese sentrum as toestel beskadig is of probleme ontstaan.

5.2. As koneksie na die muurprop beskadig is moet die toestel vervang word volgens waarborg

## 6. Probleemgids

| Probleem                        | Rede  | Aksie   |
|---------------------------------|---|---|
| Parte/bykomstighede nie by      | 1. Dit is in die drom.  | 1. Kyk in die drom om bykomstighede te vind.  |
| Die stofsuijer het nie krag nie | <ol style="list-style-type: none"> <li>1. Geen krag by die uitlaat.</li> <li>2. Nie korrek in die muurprop.</li> <li>3. Die koord is beskadig.</li> <li>4. Aan/Af skakelaar is foutief</li> <li>5. Motor is foutief.</li> </ol> | <ol style="list-style-type: none"> <li>1. Toets die kragpunt</li> <li>2. Ontkoppel van muurprop en prop weer terug.</li> <li>3. Neem na `n diensagent</li> <li>4. Neem na `n diens agent</li> <li>5. Neem na `n diensagent</li> </ol> |
| Stof kom by die uitlaat uit     | <ol style="list-style-type: none"> <li>1. Die filter is nie korrek ge installeer nie.</li> <li>2. Die filter is beskadig</li> <li>3. Die filter is verstop</li> <li>4. Die filter werk nie.</li> </ol>                          | <ol style="list-style-type: none"> <li>1. Installeer korrek.</li> <li>2. Vervang die filter</li> <li>3. Verwyder die filter en maak skoon</li> <li>4. Maak die filter skoon of vervang.</li> </ol>                                    |
| Suig nie                        | <ol style="list-style-type: none"> <li>1. Die buigbare pyp is los.</li> <li>2. Filter verstop.</li> <li>3. Drom of sak is vol</li> <li>4. Gat in pyp.</li> <li>5. Die pyp or bykomstighede is verstop.</li> </ol>               | <ol style="list-style-type: none"> <li>1. Maak pyp vas.</li> <li>2. Maak filter skoon of vervang.</li> <li>3. Maak leeg.</li> <li>4. Vervang pyp</li> <li>5. Maak pyp en bykomstighede skoon soos wat dit nodig is.</li> </ol>        |
| Statiese skok                   | <ol style="list-style-type: none"> <li>1. Droe omgewing</li> <li>2. Lug humiditeit relatief laag.</li> </ol>  | <ol style="list-style-type: none"> <li>1. Verhoog humiditeit deur `n lugbevochtiger te gebruik</li> <li>2. Dit affekteer nie die gebruik van die stofsuijer nie the use of the</li> </ol>   |
| Mis in uitlaat lug              | 1. Die filter is deurdrenk.   | 1. Maak die filter skoon of vervang.  |

# taurus

**2 YEAR  
WARRANTY**

**1 YEAR RETAIL  
+1 YEAR EXTENDED**  
taurusappliances.co.za  
Register Online

Thank you for purchasing a Taurus product. Taurus guarantees that your product has been thoroughly inspected and tested before being dispatched and is free from mechanical and electrical defects and complies with the applicable safety standards. With every Taurus product purchased you get a 2 year warranty as detailed in the terms and conditions below.

## **First Year – 1 Year Retail Warranty:**

Should defects due to faulty parts or workmanship develop, under normal domestic use, within 12 months from the original date of purchase please return the product to the store from where it was purchased for a refund or replacement.

## **Second Year – 1 Year Extended Warranty**

Taurus takes pride in their product quality and therefore offer an extended 12 month warranty over and above the 1 Year Retail Warranty. Should defects due to faulty material or workmanship develop, under normal domestic use, after the 12 month period and within 24 months from the original date of purchase, please return the product postage pre-paid to Taurus for repair. Taurus will repair the product free of charge and return it to you directly. Taurus will replace a product with a similar product in the same or better condition, if the repair cannot be conducted for whatever reason.

NB: The 1 Year Extended Warranty is only valid for customers who have registered their warranty online at [www.taurusappliances.co.za](http://www.taurusappliances.co.za) within the first year after making their purchase. See overleaf for details and instructions.

## **Before returning your product, check the following:**

- Your household mains supply socket is in good condition, working and switched on.
- The mains supply circuit is not overloaded (White trip switch on your DB board is off).
- You have read the trouble shooting guide in your Instructions for Use.
- All accessories and parts are present.

## **The following conditions apply:**

1. Please ensure you retain your receipt as this must be presented when making a claim under the terms of the guarantee. It is impossible to determine the guarantee period without proof of purchase, so please keep this in a safe place. (NB. Your guarantee can be scanned onto the Taurus web site for safe storage – see reverse side for details.)
2. If a refund or exchange is required the product must be complete with all accessories, parts and packaging. Missing parts will render the guarantee void.
3. Upon receipt of your appliance, check it for any transport damage to ensure it is safe for use. Return it to the store as soon as possible for exchange if damaged. The guarantee is void if products are damaged after

use, so please do not use the damaged product.

4. Your product is designed for normal domestic household use. Failure to read and comply with the instructions for use, cleaning and maintenance will render your guarantee void, so please read these instructions carefully to ensure your safety, and to get the most effective use from the product. (e.g. not removing lime scale; water deposits; insect infestation, and/or burnt products)
5. Any abuse, negligent, improper or accidental use or care will render the guarantee void and Creative Housewares (Pty) Ltd will not be liable for any loss or damage.
6. Any attempted repair, or replacement of unauthorised parts will render the guarantee void, so please contact an authorised service centre or service agent for any service or repair requirements.
7. NB: The guarantee on replaced products will be from the original date of purchase and not from when the date replacement was made.
8. All repairs carry a 3 month guarantee even if this falls outside of the 2 year guarantee period.
9. Taurus will attempt to conduct repairs within reasonable time in line with industry standards but cannot be held responsible or liable for any circumstances not under our control.

## **Repairs Out of the Warranty Period**

If service or repair becomes necessary outside the warranty period, this service is still available however all transport/postage, spares and labour costs will be for the customers' account. All chargeable repairs will require the customers' written acceptance of the quote. Once the go-ahead has been received Taurus will undertake to conduct the repair within a reasonable time and maintain the condition of the product as received. All repairs are guaranteed for 3 months from the date of the repair.

For any service, enquiries and complaints please contact our Customer Care on 086 111 5006 or e-mail [help@creativehousewares.co.za](mailto:help@creativehousewares.co.za) from 08h00 to 15h00 Monday to Friday excluding public holidays. Please also note that the company is normally closed for 2 weeks around Christmas and New Year.

Please send all products for repair postage pre-paid to one of the service centres listed on the back of this page.

# ONLINE WARRANTY REGISTRATION

## Why register your warranty?

We at Taurus pride ourselves on bringing premium quality appliances to market, and as a commitment to this level of quality we offer a 2 year warranty (1 Year Retail + 1 Year Extended) on all of our products. We often hear that our customers lose their receipts and can therefore no longer claim if they have a problem. To take advantage of the 1 Year Extended Warranty you will need to register your warranty online within the first year of purchase in order to make a valid claim. Now you can register your product, upload your warranty online, never have to worry about losing your receipt again and enjoy the benefit of your 2 year warranty.

## Added Benefits

In addition to providing you with an online profile of your registered products we will also provide a host of value added benefits:

- Incentives and Competitions for registered users
- New recipes or ideas for your products
- New product developments – be the first to get the latest appliances
- Special offers on promotional items

## How to Register your Online Warranty?

### STEP1 Create your user profile:

If you haven't done so already, simply visit [www.taurusappliances.co.za](http://www.taurusappliances.co.za), click on the "Product Registration" link and follow the easy instructions. You will receive a username and password once registered. This will give you access to your user profile.



[taurusappliances.co.za](http://taurusappliances.co.za)

### STEP2 Pick a registration method:



**DESKTOP/  
LAPTOP**

- Open your internet browser and visit [www.taurusappliances.co.za](http://www.taurusappliances.co.za)
- Click on the "Registration" link and login using your user name and password.
- Click on "Register your products and upload receipts" and follow the easy instructions.
- Scan and upload your receipt



**SMART  
PHONE/  
TABLET**

- Scan the QR code above or visit [www.taurusappliances.co.za](http://www.taurusappliances.co.za)
- Click on the "Registration" link and login using your user name and password.
- Click on "Register your products and upload receipts" and follow the easy instructions.
- Scan or take a photo and upload your receipt.



**FAX**

- Fax the following to 021 931 4058
- First Name and Surname
- Contact telephone and fax number.
- Product Model number and Type.
- Traceability Code (found on the Warranty Card or on a label on the product)
- A clear and legible copy of your receipt.

## Notes:

1. The online warranty system is a safe storage facility for your receipt.
2. You will be required to register on the Taurus website. You will receive a username and password once registered. This will give you access to your profile.
3. From your profile you will be able to load products that you have purchased. In order to successfully register your warranty you will need to either scan and upload, or fax through your receipt to us.
4. All instructions on how to load your products are available

inside your profile.

5. Please note that you must check that your receipt has been uploaded correctly. Creative Housewares cannot be held responsible for faxes or files not received.

6. For assistance with registration please email: [marketing@creativehousewares.co.za](mailto:marketing@creativehousewares.co.za).

**NB:** Your 1 year extended warranty is only valid if your product is registered online within the first year after purchasing your Taurus product. Failure to register your product on-line within the first year will render the extended warranty as void.

creative housewares

National Service Centre: 086 111 5006  
e-mail: [help@creativehousewares.co.za](mailto:help@creativehousewares.co.za)  
[www.creativehousewares.co.za](http://www.creativehousewares.co.za)

### Cape Town

20 Tekstiel Street, Parow, Cape Town, 7493,  
South Africa • P.O. Box 6156 Parow East, 7501,  
South Africa Tel: +27 21 931 8117  
Fax: +27 21 931 4058

### Durban

35 Adrain Road, Windermere,  
Durban, South Africa, 4001  
Tel: +27 31 303 3465  
Fax: +27 31 303 8259

### Johannesburg

Unit 25 & 26 San Croy Office Park  
Die Agora Road, Croydon, 1619  
Tel: +27 11 392 5652  
Fax: +27 11 392 1694

# taurus

**2 JAAR  
WAARBORG**  
1 JAAR KLEINHANDELS  
+ 1 JAAR UITGEBREID

taurusappliances.co.za  
Registreer Aantlyn

Dankie vir die aankoop van 'n Taurus produk. Taurus waarborg dat u produk deeglik geïnspekteer en getoets word voordat dit versend word en is vry van meganiese en elektriese gebreke en voldoen aan die toepaslike veiligheidsstandaarde. Met elke Taurus produk wat gekoop word kry u 'n 2 jaar waarborg soos uiteengesit in die terme en voorwaardes hieronder.

## **Eerste Jaar - 1 Jaar Kleinhandelswaarborg:**

Indien defekte as gevolg van foutiewe onderdele of vakmanskap binne 12 maande onder normale huishoudelike gebruik ontwikkel, binne die 12 maande vanaf die oorspronklike datum van aankoop, neem asseblief die produk na die winkel van waar dit gekoop is vir 'n terugbetaling of vervanging.

## **Tweede Jaar - 1 Jaar Uitgebreide Waarborg**

Taurus is trots op die kwaliteit van die produk en bied dus 'n uitgebreide 12 maande waarborg bo en behalwe die 1 Jaar kleinhandelswaarborg. Indien defekte as gevolg van foutiewe materiaal of vakmanskap ontwikkel, onder normale huishoudelike gebruik, na die 12 maande tydperk en binne 24 maande vanaf die oorspronklike datum van aankoop, stuur die produk terug met posgeld betaal na Taurus vir herstel. Taurus sal die produk gratis herstel en dit direk aan u terugstuur. Taurus sal die produk vervang met 'n soortgelyke produk in dieselfde of beter toestand, as die herstel nie uitgevoer kan word vir watter rede ookal nie.

NB: Die 1 Jaar Uitgebreide waarborg is slegs geldig vir kliënte wat hul waarborg geregistreer het op ons webtuiste by [www.taurusappliances.co.za](http://www.taurusappliances.co.za) binne die eerste jaar nadat hulle dit aangekoop het. Sien keersy vir besonderhede en instruksies.

## **Voordat u die produk terug stuur, maak seker van die volgende:**

- U huishoudelike geleidingsok is in 'n goeie toestand, werk en aangeskakel is,
- Die geleidingsok is nie oorlaai nie (Wit uitskop skakelaar op u DB bord af is),
- U het die moeilikheid steuringsgids gelees in u instruksies vir gebruik,
- Alle bykomstighede en dele teenwoordig is.

## **Die volgende voorwaardes geld:**

1. Maak seker dat u kwitansie behoue is, dit moet aangebied word wanneer 'n eis gemaak word onder die voorwaardes van die waarborg. Dit is onmoontlik om die waarborg tydperk te bepaal sonder die bewys van aankoop, so hou dit asseblief in 'n veilige plek. (NB. U waarborg kan opgeskander word na die Taurus webtuiste vir veilige bewaring - sien keersy vir meer inligting.)
2. Indien 'n terugbetaling of omruiling van die produk nodig is moet die produk volledig wees met al die bykomstighede, onderdele en verpakking. Toebehore wat weg is sal die waarborg nietig maak.
3. Met ontvangs van u toestel, gaan dit na vir enige vervoer skade om te verseker dat dit veilig is vir gebruik. Stuur dit so gou as moontlik terug na die winkel om die beska-

digde toestel te vervang. Die waarborg is nietig indien die beskadigde produk gebruik word na die tyd, so moet asseblief nie die beskadigde produk gebruik nie.

4. U produk is ontwerp vir normale huishoudelike gebruik. Deur te versuim om die instruksies te lees en te voldoen aan die terme van gebruik, die skoonmaak en instandhouding van die produk maak u waarborg ongeldig, so lees asseblief hierdie instruksies versigtig om u veiligheid te verseker, en om die beste uit die gebruik van die produk te kry. (bv nie die verwydering van kalk skaal; water neerslag; insek besmetting, en / of verbrande produkte)
5. Enige misbruik, nalatige, onbehoorlike of toevallige beskadiging of sorg van die produk word die waarborg nietig en Creative Housewares (Pty) Ltd, sal nie aanspreeklik wees vir enige verlies of skade nie.
6. Enige poging tot herstel, of vervanging met ongemagtigde onderdele sal die waarborg nietig maak, so kontak 'n gemagtigde dienssentrum of diensagent vir enige diens of herstelwerk.
7. NB: Die waarborg op die vervangingsprodukt sal by die oorspronklike datum van aankoop bly en nie van die datum wanneer dit vervang is nie.
8. Alle herstelwerk dra 'n 3 maande waarborg selfs al val dit buite die 2-jaar waarborg tydperk.
9. Taurus sal probeer om die herstelwerk te doen binne 'n redelike tyd in lyn met die industrie standaarde, maar kan nie verantwoordelik gehou word of aanspreeklik wees vir enige omstandighede nie onder ons beheer nie.

## **Herstelwerk buite die waarborg tydperk**

As diens of herstelwerk benodig word buite die waarborg tydperk, is hierdie diens steeds beskikbaar, maar is alle vervoer / posgeld, onderdele en arbeidskoste op die kliënte se onkoste. Alle betaalbare herstelwerk sal skriftelike aanvaarding van die kwotasie vereis van die kliënt. So dra Taurus die groen lig ontvang sal ons onderneem om die herstel binne 'n redelike tyd en in dieselfde toestand te hou as wat die produk ontvang is. Alle herstelwerk is gewaarborg vir 3 maande vanaf die datum van die herstel.

Vir enige diens, navrae en klagtes kontak ons kliënte diens op 086 111 5006 of e-pos [help@creativehousewares.co.za](mailto:help@creativehousewares.co.za) vanaf 08h00 tot 15h00, Maandag tot Vrydag, openbare vakansiedae uitgesluit. Let asseblief ook daarop dat die maatskappy gewoonlik gesluit is vir 2 weke gedurende Kersfees en Nuwejaar.

Stuur asseblief alle produkte vir herstel met posgeld vooruit betaal aan een van die dienssentrums wat op die agterkant van hierdie bladsy verskyn.

# AANLYN WAARBORG REGISTRASIE

## Hoekom moet u die waarborg moet registreer?

Ons by Taurus is trots om premium gehalte toestelle op die mark te bring, en as 'n verbintenis tot die vlak van gehalte bied ons 'n 2 jaar waarborg (1 Jaar Kleinhandel + 1 Jaar Uitgebreide) op al ons produkte. Ons hoor dikwels dat ons kliënte hul kwitansies verloor en kan dus nie meer eis as hulle 'n probleem het nie. Om voordeel te trek van die 1 Jaar Uitgebreide waarborg sal u nodig hê om u waarborg aanlyn te registreer binne die eerste jaar van aankoop om 'n geldige eis te maak. Nou kan u die produk aanlyn registreer, laai u waarborg en hoef u nooit te bekommer dat u die kwitansie sal verloor nie en die voordeel van u 2-jaar waarborg geniet.

## Bygevoegde Voordele

Bykomend tot die verskaffing van 'n aanlyn profiel van u geregistreerde produkte bied ons ook vele ander toegevoegde waarde voordele:

- aansporings en kompetisies vir geregistreerde gebruikers
- nuwe resepte of idees vir u produkte
- nuwe produk ontwikkelings - die eerste wees om die nuutste toestelle te kry
- spesiale aanbiedings op promosie-items

## Hoe om u Aanlyn Waarborg te Registreer?

### STAP 1 Skep u gebruikersprofiel:

As u dit nie reeds gedoen het nie, besoek [www.taurusappliances.co.za](http://www.taurusappliances.co.za), klik op die "Product Registration" skakel en volg die maklike instruksies. U sal 'n gebruikersnaam en wagwoord ontvang sodra u geregistreer het. Dit sal u toegang tot u profiel gee.

### STAP 2 Kies 'n registrasie metode:



#### REKENAAR/ SKOOTREK- ENAAR

- Maak u internet snuffelgids oop en besoek [www.taurusappliances.co.za](http://www.taurusappliances.co.za)
- Klik op die "Registrasie" skakel en teken in met u gebruikersnaam en wagwoord.
- Klik op "Register your products" en laai kwitansies en volg die maklike instruksies.
- Skandeer en laai u strokie



#### SMART- FOON / TABLET

- Skandeer die QR-kode bo of besoek [www.taurusappliances.co.za](http://www.taurusappliances.co.za)
- Klik op die "Registration" skakel en teken aan met u verbruikersnaam en wagwoord.
- Klik op "Register your products" en laai u kwitansie en volg die maklike instruksies.
- Skandeer of neem 'n foto en laai u strokie.



#### FAKS

- Faks die volgende na 021 931 4058
- Naam en Van
- Kontak telefoon en faksnommer.
- Produk model nommer en tipe.
- Traceability Code (wat op die
- Waarborgkaart of op 'n etiket op die produk gevind kan word)
- 'n Duidelike en leesbare afskrif van u ontvangs.



[taurusappliances.co.za](http://taurusappliances.co.za)

## Notas:

1. Die aanlyn waarborg stelsel is 'n veilige stoor fasiliteit vir u strokies.
2. U sal gevra word om op die Taurus webtuiste te registreer. U sal 'n gebruikersnaam en wagwoord ontvang. Dit sal u toegang gee tot u profiel.
3. Van u profiel u sal in staat wees om produkte te laai wat u gekoop het. Om u waarborg suksesvol te registreer sal u nodig hê om of te skandeer en oplaai, of faks u strokie deur na ons.
4. Alle instruksies oor hoe om u produkte te laai is beskikbaar binne in u profiel.
5. Let daarop dat u moet seker maak dat u kwitansie korrek op-

gelaai is. Creative Housewares kan nie verantwoordelik gehou word vir faksse of lêers nie ontvang nie.  
6. Vir hulp met registrasie e-pos asseblief: [marketing@creative-housewares.co.za](mailto:marketing@creative-housewares.co.za).

**NB:** U 1 jaar verlengde waarborg is slegs geldig indien u produk aanlyn geregistreer is binne die eerste jaar na die aankoop van u Taurus produk. Indien u produk nie aanlyn geregistreer word binne die eerste jaar nie sal dit die verlengde waarborg nietig maak.

creative housewares

Nasionale Dienssentrum: 086 111 5006  
e-pos: [help@creativehousewares.co.za](mailto:help@creativehousewares.co.za)  
[www.creativehousewares.co.za](http://www.creativehousewares.co.za)

### Kaapstad

20 Tekstielstraat, Parow, Kaapstad, 7493, Suid Afrika • PO. Box 6156 Parow Oos, 7501, Suid Afrika Tel: +27 21 931 8117  
Faks: +27 21 931 4058

### Durban

35 Adrainweg, Windermere, Durban, Suid Afrika, 4001  
Tel: +27 31 303 3465  
Faks: +27 31 303 8259

### Johannesburg

Unit 25 & 26 San Croy Office Park  
Die Agora Road, Croydon, 1619  
Tel: +27 11 392 5652  
Fax: +27 11 392 1694

Durban  
35 Adrain Road, Windermere,  
Durban, South Africa, 4001  
Tell: +27 31 303 3465  
Fax: +27 31 303 8259

creative housewares  
 20 Tekstiel St, Parow, Cape Town, 7493, RSA  
 P.O. Box 6156 Parow East, 7501, RSA  
 +27 21 931 8117       +27 21 931 4058  
Service Centre Helpline: 086 111 5006  
 [www.creativehousewares.co.za](http://www.creativehousewares.co.za)

Johannesburg  
Unit 25 & 26 San Croy Office Park  
Die Agora Road, Croydon, 1619  
Tell: +27 11 392 5652  
Fax: +27 11 392 1694