



Lucky[®]

LIFESTYLE



3 IN 1 TRIMMER SET

COMPLIES WITH
INTERNATIONAL
IEC60335
SAFETY SPECIFICATIONS

L
1.5 V


1 YEAR
GUARANTEE

Model:
NTRB31SA

PLEASE READ ALL INSTRUCTIONS BEFORE USE



The set contains all the attachments and accessories you need to maintain a well-groomed look on your beard, mustache, sideburns, neckline, nose, ears and eyebrows.

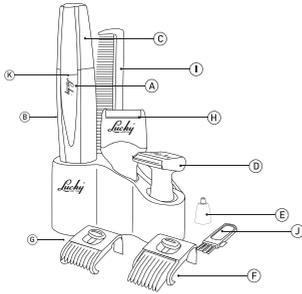

Parts

- A. ON/OFF switch
- B. Groomer
- C. Battery cap
- D. Wide trimmer attachment Titanium-coated trimmer blades
- E. Nose, ear, eyebrow trimmer attachment
- F. Hair length comb attachment 1
- G. Hair length comb attachment 2
- H. Mini Screen shaver attachment
- I. Grooming comb
- J. Cleaning brush
- K. Indicator light

How to use

Setup of Battery

1. Open the battery cap
2. Insert one AA battery into the cell
3. Close the battery cap

Attachments

- To attach: Set the attachment onto the open end of the trimmer, and turn it so the solid arrow aligns with the solid circle.
- To remove: Turn the attachment so the open arrow aligns with the open circle, and pull it off.

Hair Length Combs

- The hair length combs attach onto the wide trimmer head to control the length of the cut. There are four positions for each attachment:

Hair length comb 1

- 1- Extra close
- 2- Close
- 3- Short
- 4- Medium short Hair length comb 2
- 5- Medium
- 6- Medium long
- 7- Long
- 8- Extra long

- To attach: Place the front hooks of the hair length attachment over the front of the wide trimmer head, and pivot it onto the trimmer head until it locks into place.
- To remove: Push up on the tab on back of hair length attachment.

What Attachment to Use

	Wide trimmer	Nose/ear trimmer	Hair length combs	Mini Screen shaver
Beard	X		X	
Beard line	X			
Ear		X		
Eyebrow				
Mustache	X		X	
Nape of Neck	X			
Noase		X		
Sideburns	X		X	

Usage Tips

Trimming

- Hair should be dry and free of lotions when using your trimmer.
- Comb hair outward so they are at their maximum height and facing in the same direction.
- Make sure the trimmer does not have damaged or broken cutter units, which could cause injury if used.

Beard

- What to use: wide trimmer head + comb attachment
- Attach the desire hair length comb to the trimmer head as described above.
- Set the comb to the desired trim length. It's usually a good idea to use a longer setting until you are familiar with the trimmer, to avoid trimming too much hair.
- Turn the trimmer on.
- Start under your chin and, following your jaw line, trim toward your ear and upper beard line using an upward motion. Allow the comb attachment to follow the outline of your face.

Thinning and tapering

What to use: wide trimmer

- Turn the trimmer on.
- Use a small comb to hold the beard hair in place while trimming.



- Hold the groomer with the cutting unit facing away from you, move the trimmer along the length of the comb.

Beard line

- What to use: wide trimmer
- Turn the trimmer on.
- Hold the trimmer with the cutting blades facing you.
- Lightly touch the cutting blades to your face and draw the groomer toward your beard line. For your neck, draw the trimmer away from desired beard line.

Around the beard

- What to use: Mini Screen shaver attachment
- Turn the trimmer on.
- Use the Mini Screen shaver to shave the detail areas around the beard.
- Hold the trimmer so the mini screen gently touches your skin. This allows the unit to give you the closest shave with minimum screen wear. Avoid holding the trimmer at an angle. This will distort the screen and may cause some skin irritation.

Ear

Ear canal

- What to use: nose/ear trimmer head
- Turn the trimmer on.
- Gently insert the trimmer's cutting unit into the outer ear canal. For safe trimming, avoid inserting the trimmer more than 1/4 inch into the ear canal.
- Rotate the groomer in a circular motion, gently moving it in and out as you rotate.

Outer ear

- What to use: nose/ear trimmer head
- Turn the trimmer on.
- Carefully guide the trimmer around surfaces of the ear where there is unwanted hair.

Eyebrows

- What to use: nose/ear trimmer head
- Turn the trimmer on.
- Carefully guide the cutting edges to stray hair along the eyebrow line or protruding from the eyebrow itself.
- For best results, don't use the trimmer to define the entire eyebrow.

Mustache

- What to use: wide trimmer
- Use small comb to straighten hair for trimming.
- Turn the trimmer on.
- Lightly touch the cutting blades to the mus-

tache. Too much pressure may trim more hair than desired.

- Since the hair does not grow in the same direction, you may want to try trimming upwards, downwards, or across.
- Practice will produce optimum results.

Nape of Neck

- What to use: wide trimmer
- Use a hand mirror if you are trimming the nape of your neck yourself. A mirror is unnecessary if someone else is trimming for you.
- Lift the hair up off the neck, and use your index finger to cover the roots of any hair you DON'T want to trim. This will serve as a bumper to prevent accidentally trimming too much hair.
- Turn the trimmer on and hold it base-side up, as shown.
- Touch the cutting edges to your neck, and move the trimmer slowly up your neck until it touches the finger that's covering the roots of your hair.

Nose

- What to use: nose/ear trimmer head
- Turn the trimmer on.
- Insert the trimmer's cutting unit gently into the nostril. For safe trimming, avoid inserting the groomer more than 1/4 inch into your nostril.
- Rotate the trimmer in a circular motion around the opening of the nostril, gently moving it in and out as you rotate.

Cleaning

Clean your trimmer regularly

- Clean your trimmer regularly to ensure your unit's operating life is not prematurely shortened.

Cleaning attachments with water


- Remove attachments.
- Rinse attachments under warm running water. Do NOT use hot water, which may cause damage to components.
- You can use a hair dryer on a cool or medium heat setting to help dry off the attachments. If desired.
- ! Do not use harsh or corrosive cleaners on the unit or its cutter.
- ! Do not apply pressure or hard object to the cutter.

Cleaning with brush

- Thoroughly brush and blow out hair clippings from cutter, bottom of attachments, and top of power handle.



Die stel bevat al die aanhegselfe en bykomstighede wat jy nodig het om 'n goed versorgde voorkoms op jou baard, snor, kant hare, nek, neus, ore en wenkbroue te handhaaf.

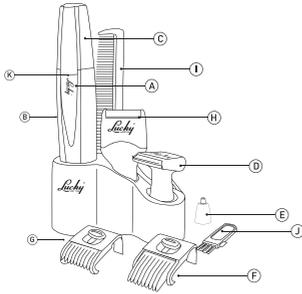

Parte

- A. AAN/AF skakelaar
- B. Motor
- C. Battery deksel
- D. Wye sny aanhegsel
- Titaan bedekte sny lemme
- E. Neus, oor, wenkbrou sny aanhegsel
- F. Haarlengte kam 1 aanhegsel
- G. Haarlengte kam 2 aanhegsel
- H. Mini skeer aanhegsel
- I. Versorging kam
- J. Skoonmaak borsel
- K. Indikasie lig

Hoe om te gebruik

1. Maak battery deksel oop
2. Sit een AA battery in gleuf
3. Maak deksel toe

Aanhegsel

- Om aan te heg: Druk aanhegsel in die oop kant en draai sodat die pyl oplyn met die sirkel.
- Om te verwyder: Draai totdat die oop pyl oor die oop sirkel is en trek af.

Haarlengte kam

- Die haarlengte kamme heg aan die wye kant van die kop van die trimmer om die lengte te kontroleer. Daar is vier posisies vir elke aanhegsel:

Haarlengte kam 1

- 1- Baie naby
- 2- Naby
- 3- Kort
- 4- Medium kort
- 5- Medium
- 6- Medium lank
- 7- Lank
- 8- Extra lank

- Om aan te heg: Plaas die voorste hake van die aanhegsel oor die voorste gedeelte van die wye

kop en druk totdat dit in plek sluit.

- Om te verwyder: Druk die lip aan die agterkant van die aanhegsel op.

Keuse van aanhegsel

	Wye snyer	Neus/oor snyer	Haar lengte kam	Mini skeerder
Baard	X		X	
Baard lyn	X			
Oor		X		
Wenkbroue				
Snor	X		X	
Nekhare	X			
Neus		X		
Kanthare	X		X	

Gebruikswenke

- Hare moet droog en vry van haarprodukte wees.
- Kam hare opwaarts sodat dit op maximum hoogte is en in dieselfde rigting wys.
- Maak seker die snyer het nie gebreekte snyer eenhede, wat besering tot gevolg kan he.

Baard

- Wat om te gebruik: wye kop + kam aanhegsel
- Heg die gewenste haarlengte kam aan die snylem soos beskryf bo.
- Stel die kam na gewenste lengte. Dit word aanbeveel om 'n langer lengte te gebruik tot jy gewond is aan die snyer en om te verhoed dat te veel hare afgesny word.
- Skakel aan.
- Begin onder die kene vold jou kakebeen lyn in jou oor se rigting en boonste baard lyn. Laat die kam die lyn van jou gesig volg.

Uitdun en vorm

- Wat om te gebruik: wye snyer
- Skakel aan.
- Gebruik a klein kam om harein plek te hou terwyl uitdun.
- Hou die snyer met die snylem weg van jou, en beweg die snyer oor die lengte van die kam.

Baard lyn

- Wat om te gebruik: wye snyer
- Sakel aan.
- Hou die snyer met die snylem na jou toe.
- Raak liggies aan gesig en trek snyer na jou baarlyn toe. Vir jou nek trek weg van die baardlyn.



Om die baard area

- Wat om te gebruik: mini skeer aanhegsel
- Skakel aan.
- Gebruik die skeerder vir die area om die baard.
- Hou die skeerder sodat die mini-skerm jou vel liggies raak. Dit laat die eenheid toe om jou `n gladde skeer te gee. Moenie die skeerder skuins hou nei, dit `n vel irritasie veroorsaak.

Oor

Oor kanaal

- Wat om te gebruik: neus/oor aanhegsel
- Skakel aan.
- Steek die sny eenheid versigtig in die buitenste oorkanaal. Vir 'n veilige sny, vermy om die trimmer meer as 1/4 duim in die oorkanaal te plaas.
- Draai die snyer in 'n sirkelbeweging, beweeg dit liggies in en uit terwyl jy draai. **VERSIGTIG:** Moenie diep in die oor druk nie.

Buite oor:

- Wat om te gebruik: neus/oor aanhegsel
- Skakel aan..
- Gly die snyer oor die oor of van ongewenste hare onslae te raak

Wenkroue

- Wat om te gebruik: neus/oor aanhegsel
- Skakel aan.
- Gly die snyer versigtig oor die hare langs die wenkbrou lyn en wat uitsteek onder die wenkbrou lyn.
- Moenie oor die wenkbroue gebruik nie.

Snor

- Gebruik 'n klein kam om hare reg te maak vir sny.
- Skakel aan.
- Raak liggies met die snyer aan die snor. Te veel druk kan te veel afsny
- Aangesien die hare nie in dieselfde rigting groei nie, kan jy probeer om opwaarts, afwaarts of dwars te probeer sny.
- Om te oefen sal optimale resultate lewer.

Nekhare

- Wat om te gebruik: wye snyer
- Gebruik 'n handspieël as jy die nekhare van jou nek wil afsny. 'n Spieël is onnodig as iemand anders vir jou doen.
- Lig die hare van die nek af en gebruik jou wysvinger om die wortels van enige hare te bedek wat jy nie wil sny nie. Dit sal as 'n buffer dien om te voorkom dat dit te veel hare afgesny word.
- □ Skakel aan en hou dit aan die onderkant, soos aangedui.

- Druk die snyrande op jou nek en beweeg die snyer stadig op jou nek totdat dit aan die vinger raak wat die wortels van jou hare bedek.

Neus

- Wat om te gebruik: neus/oor aanhegsel
- Skakel aan.
- Sit die snyer se sny eenheid liggies in die neusgat. Vir 'n veilige sny, vermy om die snyer meer as 1/4 duim in jou neusgat in te druk.
- Draai die snyer in 'n sirkelbeweging om die opening van die neusgat, beweeg dit sag in en uit terwyl jy draai. **VERSIGTIG:** moenie diep in die oor druk nie

Skoonmaak

Maak snyer gereeld skoon

- Maak gereeld jou snyer skoon om te verseker dat die eenheid se bedryfsduur nie vroegtydig verkort word nie.

Skoonmaak van aanhegsels met water

- Verwyder aanhegsels.
- Spoel aanhegsels onder warm lopende water. Moenie kokende water gebruik nie, wat skade aan aanhegsels kan veroorsaak.
- Jy kan 'n haardroer gebruik op 'n koel of medium hitte-stelling om droog te maak.
- ! Moenie skuur produkte op die snyer of aanhegsels gebruik nie.
- ! Moenie hard op die snyer druk nie.

Skoonmaak van borsel

- Borsel en blaas haartjies deeglik uit die snyer, die onderkant van die aanhegsels en die bokant van krag handvatset





Lucky guarantees that this product has been thoroughly inspected and tested before being dispatched and is free from mechanical and electrical defects and complies with the applicable safety standards. However, should defects due to faulty material or workmanship develop, under normal domestic use, within 6 months from the date of purchase please return the product to the store from where it was purchased for a full refund or replacement.

The following conditions apply:

- 1) Please ensure you retain your receipt as this must be presented when making a claim under the terms of the guarantee. It is impossible to determine the guarantee period without proof of purchase, so please keep this in a safe place.
- 2) If a refund or exchange is required the product must be complete with all accessories, parts and packaging. Missing parts will render the guarantee void.
- 3) Upon receipt of your appliance check it for any transport damage to ensure it is safe for use. Return it to the store as soon as possible for exchange if damaged. The guarantee is void if products are damaged after use, so please do not use the damaged product.
- 4) Your product is designed for normal domestic household use. Failure to read and comply with the instructions for use, cleaning and maintenance will render your guarantee void, so please read these instructions carefully to ensure your safety, and get the most effective use from the product. (e.g. lime scale; water deposits; and/or insect infestation)
- 5) Any abuse, negligent, improper or accidental use or care will render the guarantee void and Creative Housewares (Pty) Ltd will not be liable for any loss or damage.
- 6) Any attempted repair, or replacement of unauthorised parts will render the guarantee void, so please contact an authorised service centre or agent for any service or repair requirements.

Extended 12 Month Limited Guarantee

Lucky offer an extended 12 month limited guarantee from the date of purchase to offer the consumer peace of mind on their purchase. Should defects due to faulty material or workmanship develop, under normal domestic use, within 12 months from the date of purchase, please return the product to the store from where it was purchased for replacement.

Before returning your product, check for the following:

- 1) Your household mains supply socket is working and switched on.
- 2) The mains supply circuit is not overloaded (White trip switch on your DB board is off).
- 3) You have read the trouble shooting guide in your Instructions for Use.
- 4) All accessories and parts are present.

If service or repair becomes necessary outside the guarantee period, this service is still available however all transport/postage, spares and labour costs will be paid by the consumer. All chargeable repairs will require the consumers' approval in writing once the quote is accepted. Once the go-ahead has been received Lucky will undertake to conduct the repair within a reasonable time and maintain the condition of the product as received.

All repairs carry a 3 month guarantee. Lucky will attempt to conduct repairs within reasonable industry standards but cannot be held responsible or liable for any circumstances not under their direct control.

National Service Centre: 086 111 5006

e-mail: help@creativehousewares.co.za

creative housewares

web: www.creativehousewares.co.za

Cape Town

20 Tekstiel Street, Parow, Cape Town, 7493, South Africa
P.O. Box 6156 Parow East, 7501, South Africa
Tel: +27 21 931 8117 Fax: +27 21 931 4058

Johannesburg

9 Hamburg Road, Aeroport, Spartan,
Johannesburg, South Africa
Tel: +27 11 392 5652 Fax: 086 567 9222

1 year warranty



Lucky waarborg dat hierdie produk deeglik nagegaan en getoets is voordat dit versend is en is vry van meganiese en elektriese afwykings is en voldoen aan die toepaslike veiligheidsstandaarde. Indien gebreke weens foutiewe materiaal of vakmanskap egter onder normale huishoudelike gebruik binne 6 maande vanaf die aankoopdatum ontwikkel word, moet u die produk terugstuur na die winkel waar dit gekoop is vir volle terugbetaling of vervanging.

Die volgende voorwaardes geld:

- 1) Maak asseblief seker dat u die kwitansie behou, aangesien dit aangebied moet word wanneer u 'n eis maak onder die voorwaardes van die waarborg. Dit is onmoontlik om die waarborgtydperk te bepaal sonder bewys van aankoop. Hou dit asseblief op 'n veilige plek.
- 2) Indien 'n terugbetaling of omruil benodig word, moet die produk volledig wees met alle bykomstighede, onderdele en verpakking. Ontbrekende dele sal die waarborg ongeldig maak.
- 3) 3) By ontvangs van u toestel, moet u dit nagaan vir enige vervoerskade om te verseker dat dit veilig is vir gebruik. Stuur dit so spoedig moontlik na die winkel vir ruil indien dit beskadig is. Die waarborg is nieig indien produkte na gebruik beskadig word. Gebruik asseblief nie die beskadigde produk nie.
- 4) U produk is ontwerp vir normale huishoudelike gebruik. Versuim om te lees en te voldoen aan die gebruiksaanwysings, skoonmaak en instandhouding sal u waarborg ongeldig maak. Lees asseblief hierdie instruksies sorgvuldig om u veiligheid te verseker en die beste gebruik van die produk te verkry. (Bv. Kalk, waterafsettings, en / of insekbesmetting)
- 5) Enige misbruik, nalatige, onbehoorlike of toevallige gebruik of versorging sal die waarborg ongeldig maak en Creative Housewares (Edms) Bpk sal nie aanspreeklik wees vir enige verlies of skade nie..
- 6) Enige poging tot herstel of vervanging van ongemagtigde dele sal die waarborg ongeldig maak. Kontak asseblief 'n gemagtigde dienssentrum of agent vir enige diens- of herstelbehoefes.

Uitgebreide 12 maande beperkte waarborg

Lucky bied 'n verlengde 12 maande beperkte waarborg vanaf die aankoopdatum aan om die verbruiker gemoedsrus by hul aankoop aan te bied. Indien gebreke weens foutiewe materiaal of vakmanskap onder normale huishoudelike gebruik binne twaalf maande vanaf die datum van aankoop ontwikkel, moet u die produk terugstuur na die winkel waar dit gekoop is vir vervanging.

Voordat u die produk terugbesorg, kyk na die volgende:

- 1) Jou huishoudelike krag toevoer werk en is aangeskakel.
- 2) Die kragtoevoerstroombaan is nie oorlaai nie (Wit ritskakelaar op jou DB-kaart is af).
- 3) U het die probleem gids gelees in u gebruiksaanwysings.
- 4) Alle bykomstighede en onderdele is teenwoordig.

As diens of herstel buite die waarborgperiode nodig word, is hierdie diens nog beskikbaar, maar alle vervoer / posgeld, onderdele en arbeidskoste sal deur die verbruiker betaal word. Alle vergoedbare herstelwerk sal die verbruikers se goedkeuring skriftelik vereis sodra die kwotasie aanvaar word. Sodra die gaan voort ontvang is, sal Lucky onderneem om die herstel binne 'n redelike tyd te doen en die toestand van die produk te behou soos ontvang.

Alle herstelwerk dra 'n 3 maande waarborg. Lucky sal pogg om herstelwerk te doen binne redelike bedryfsstandaarde, maar kan nie aanspreeklik gehou word vir enige omstandighede wat nie onder hulle direkte beheer is nie.

National Service Centre: 086 111 5006

e-mail: help@creativehousewares.co.za

creative housewares

web: www.creativehousewares.co.za

Cape Town

20 Tekstiel Street, Parow, Cape Town, 7493, South Africa
P.O. Box 6156 Parow East, 7501, South Africa
Tel: +27 21 931 8117 Fax: +27 21 931 4058

Johannesburg

9 Hamburg Road, Aeroport, Spartan,
Johannesburg, South Africa
Tel: +27 11 392 5652 Fax: 086 567 9222

1 jaar waarborg



Durban
35 Adrain Road, Windermere,
Durban, South Africa, 4001
Tell: +27 31 303 3465
Fax: +27 31 303 8259

creative housewares

 20 Tekstiel St, Parow, Cape Town, 7493, RSA
 P.O. Box 6156 Parow East, 7501, RSA
 +27 21 931 8117  +27 21 931 4058
Service Centre Helpline: 086 111 5006
 www.creativehousewares.co.za

Johannesburg
Unit 25 & 26 San Croy Office Park
Die Agora Road, Croydon, 1619
Tell: +27 11 392 5652
Fax: +27 11 392 1694

