



ELECTRIC SCREEN

USER MANUAL




SAFETY GUIDE

- When installing and assembling the screen, do not stand under the until it is securely mounted.
- Ensure that the screen is connected to a safe source of power to avoid the possibility of electric shock.




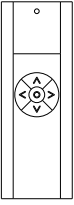
REMARK


- Do not run the screen motor continuously for more than 4 minutes as the over heating protection will stop the motor to prevent over heating. Should this happen, wait 20 minutes for the motor to cool down.
- Do not scratch or fold the fabric
- After usage, check that the fabric is clean before retracting the screen.
- Clean the fabric with a damp soft towel (do not use alcohol or ether liquid to clean)
- The screens Black top drop is set to its maximum drop distance, there is no additional top drop on the roller.
- Modifications to the unit will void the manufacturers warrantee.

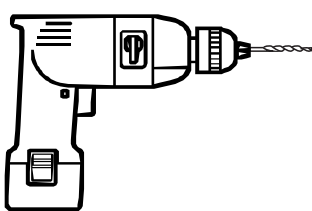Parts	Dust	Soil
Casing	Remove dust with a feather duster	Clean with a mild soap solution and a soft cloth. Avoid any abrasive materials
Fabric	Remove dust with a feather duster	Clean with a damp soft cloth.



ACCESSORIES

ACCESSORIES LIST			
<p>B.24.060120.6</p> 	<p>B.99.008000.0</p> 		
<p>x5</p>	<p>x5</p>	<p>x1</p>	<p>x1</p>


<p>x1</p>

B.24.060120.6





x4

B.99.008000.0





x4

WALL MOUNT

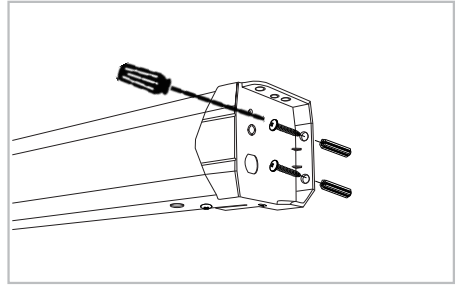
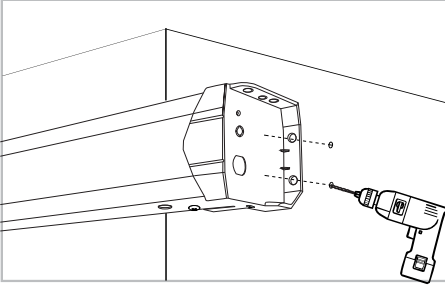


- STEP 1:** Measure the distance between the keyholes on the end cap.
- STEP 2:** Mark the location on the wall where you would like to install the screen and pre-drill the holes.
- STEP 3:** Insert plugs into the pre-drilled holes.
- STEP 4:** Mount the screen from the keyholes on the end cap.


CEILING MOUNT

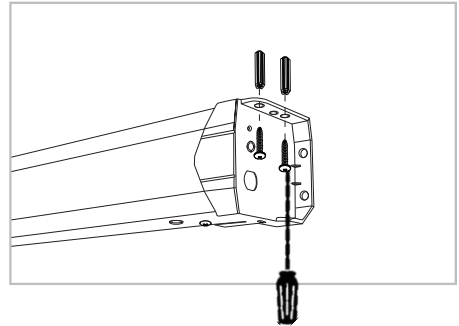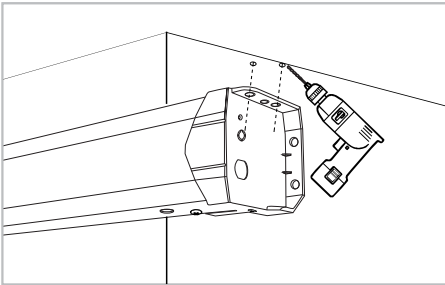


- STEP 1:** Measure the distance between the keyholes on the top of the end cap.
- STEP 2:** Mark the location on the wall where you would like to install the screen and pre-drill the holes.
- STEP 3:** Insert plugs into the pre-drilled holes. (Use hollow wall anchors if needed)
- STEP 4:** Mount the screen from the keyholes on the end cap.

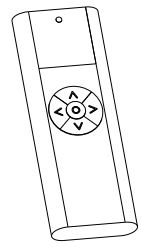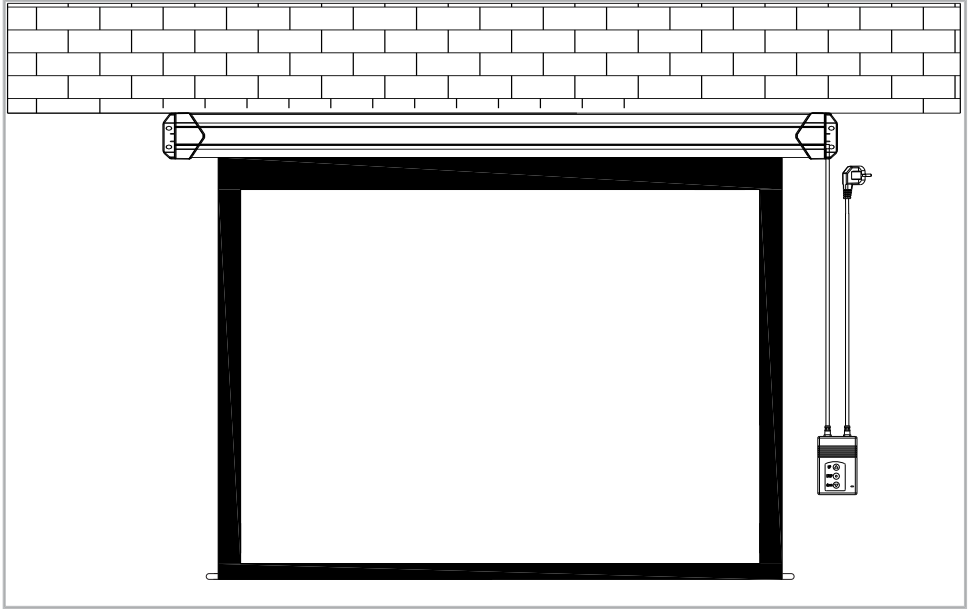

ADJUSTMENT AND USAGE

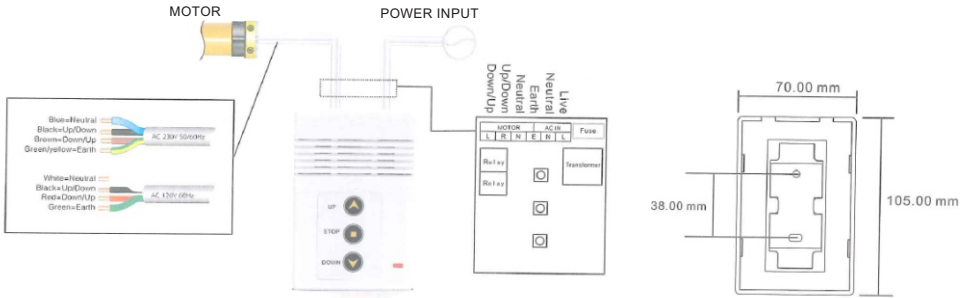

Program Each receiver is able to store 20pcs transmitters, the 21st transmitters cover the 20th transmitter automatically.

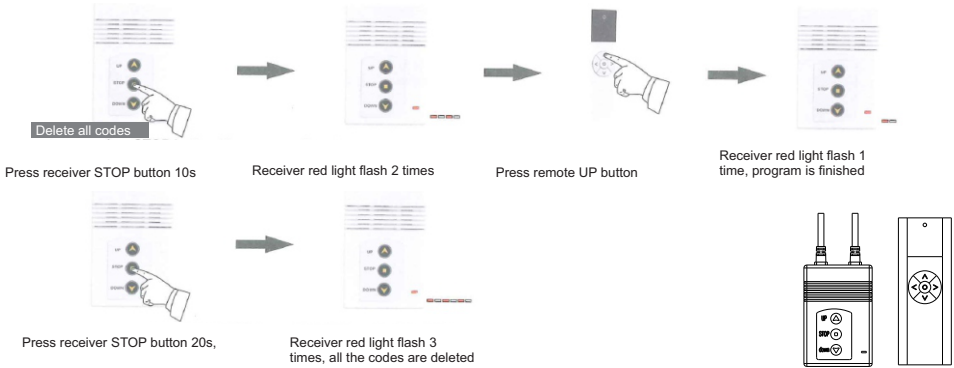

ADJUST LIMIT SWITCH

Adjust position for the two limit journey, refer to below diagram.

